

PARTS LIST - 2 PERSON ASSEMBLY:-

A	PRE-ASSEMBLED TABLE TOP	1 no.
B	END A-FRAME	2 no.
C	MIDDLE A-FRAME	1 no.
D	PRE-ASSEMBLED SEAT	2 no.
E	70mm BRASS SCREWS	52 no.
F	70mm S/STEEL SCREWS	28 no.

TOOLS:-

POWER DRILL WITH PHILIPS-HEAD BIT


MEASURING TAPE & STRAIGHT EDGE

IMPORTANT:-

Ensure that you are familiar with these assembly instructions prior to commencing assembly.

We will not accept any claims resulting from products that have been wrongly assembled.

Employ safe lifting procedures when handling components.

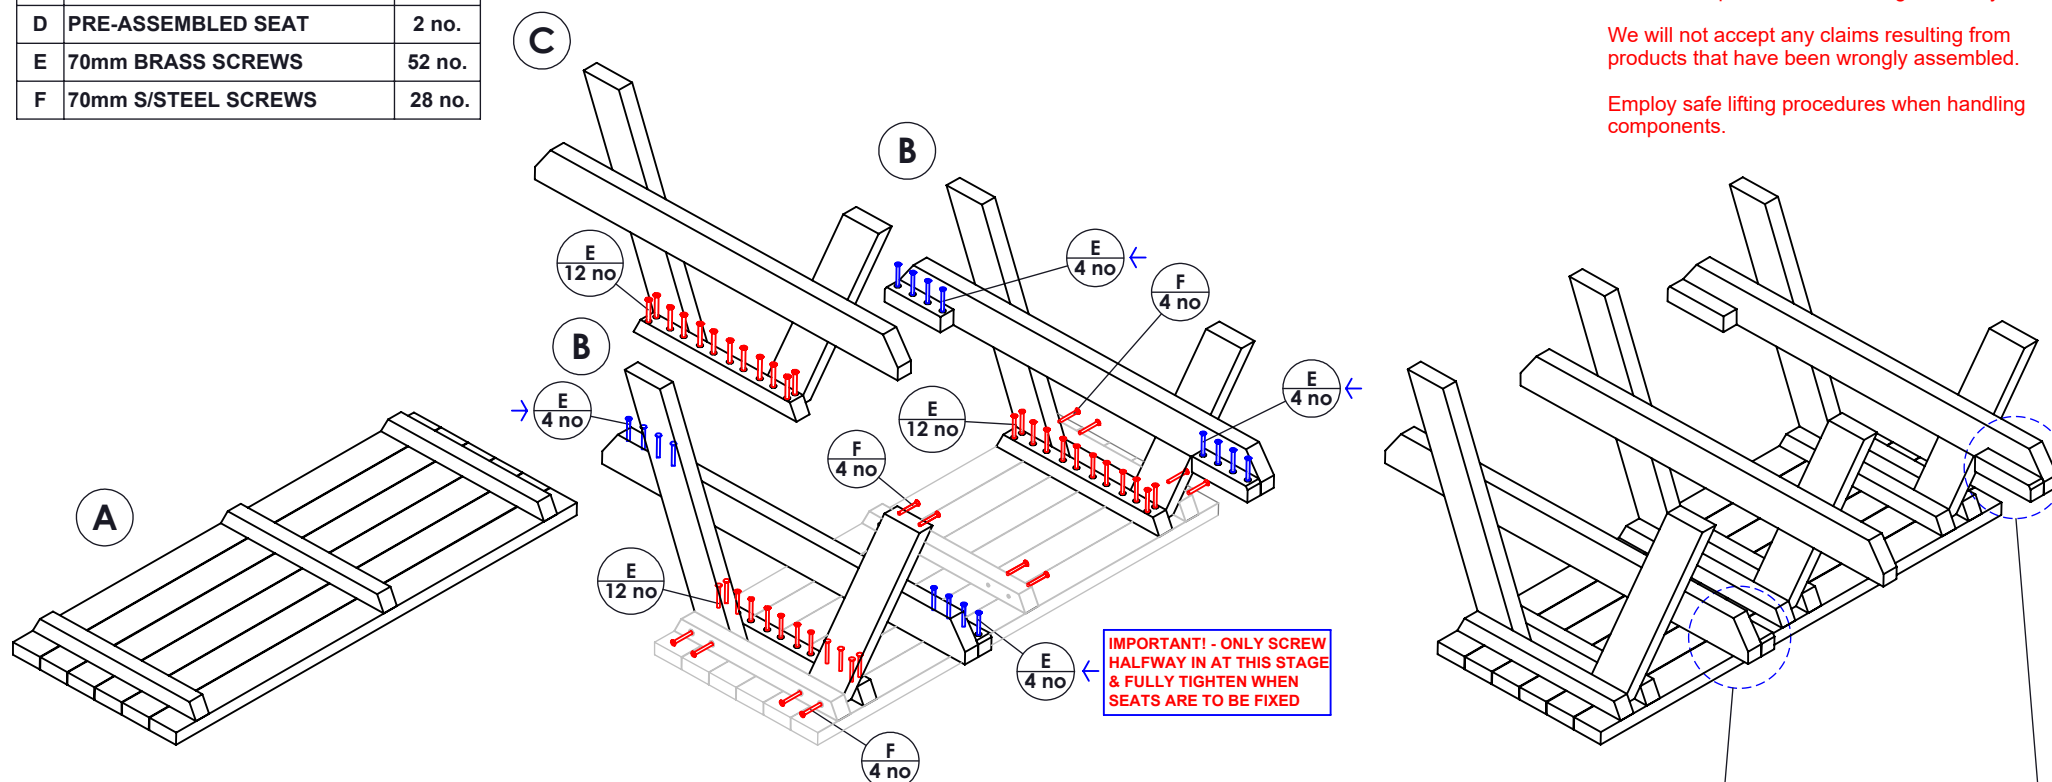

BEGIN ASSEMBLY WITH TABLE TOP TURNED UPSIDE DOWN

FIX A-FRAMES TO TABLE TOP USING 70mm SCREWS THROUGH PRE-DRILLED HOLES IN FIXING BARS

BEFORE FULLY TIGHTENING ALL SCREWS CHECK THAT THE PICNIC TABLE IS SQUARE BY MEASURING ACROSS THE DIAGONALS

ENSURE END A-FRAMES HAVE THE SEAT FIXING BLOCKS FACING INWARDS AS SHOWN

DENHOLME PICNIC TABLE:

Assembly Guide - 1 of 2.

Registered Office: Unit 8C, Top Land Country Business Park,
Cragg Road, Mytholmroyd, West Yorkshire, HX7 5RW

Freephone: 0808 281 2929 - E-mail: info@britishrecycledplastic.co.uk




TOOLS:-**POWER DRILL WITH PHILIPS-HEAD BIT****MEASURING TAPE & STRAIGHT EDGE****IMPORTANT:-**

Ensure that you are familiar with these assembly instructions prior to commencing assembly.

We will not accept any claims resulting from products that have been wrongly assembled.

Employ safe lifting procedures when handling components.

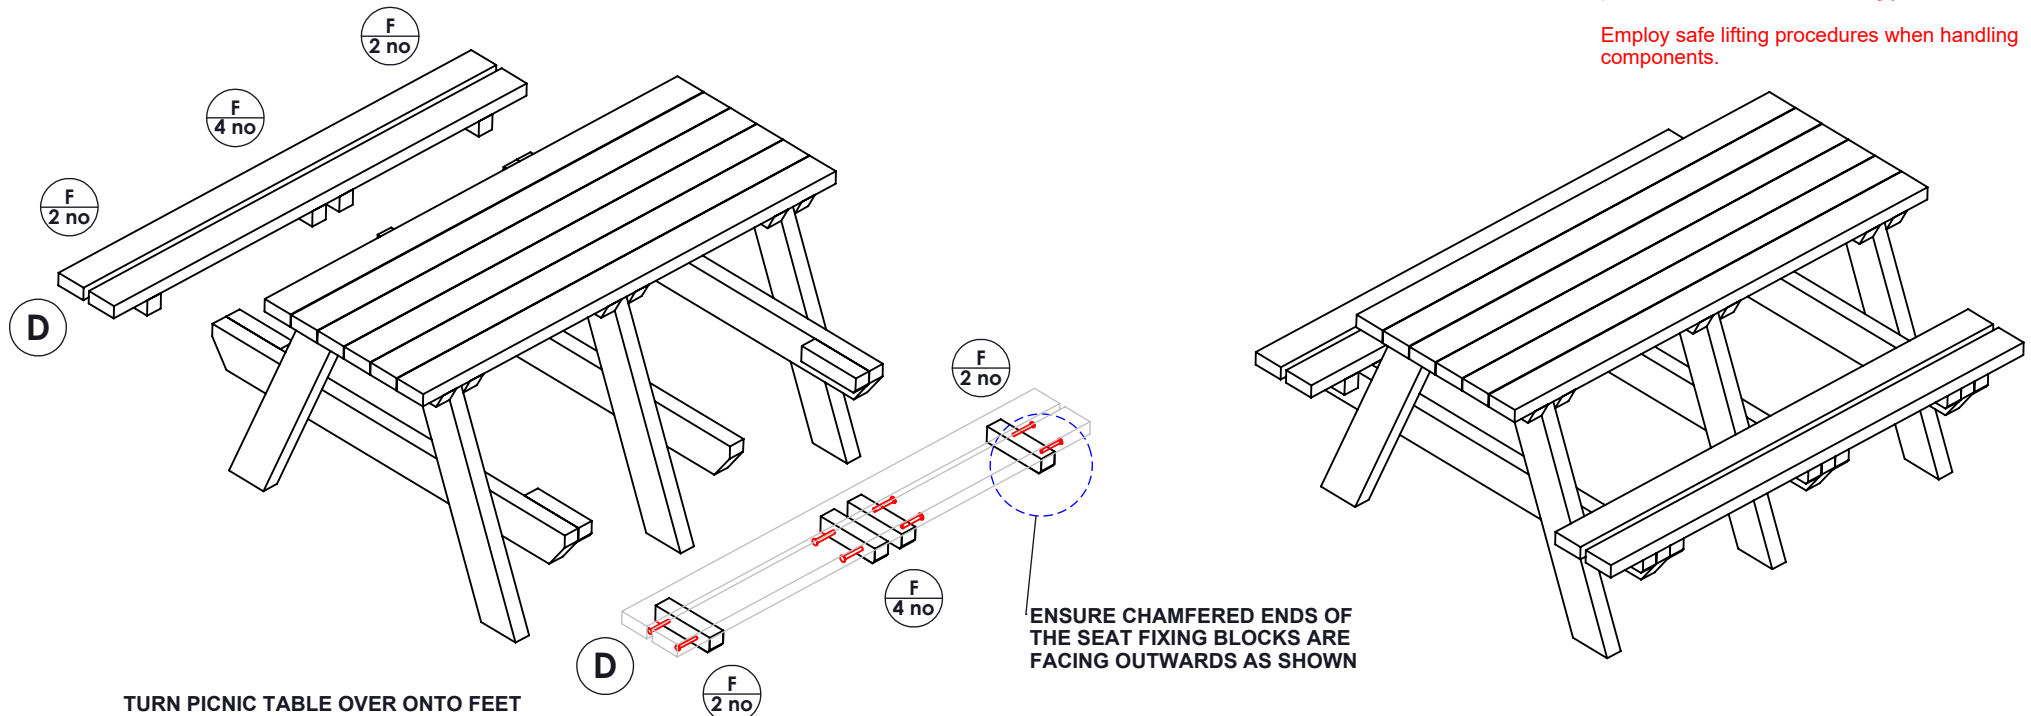

TURN PICNIC TABLE OVER ONTO FEET
& FIX PRE-ASSEMBLED SEATS USING 70mm
SCREWS THROUGH PRE-DRILLED HOES
IN SEAT FIXING BLOCKS

**IMPORTANT - ENSURE THAT THE 16 no BRASS SEAT
FIXING SCREWS ARE NOW FULLY TIGHTENED - THESE
ARE SHOWN ON PAGE 1 OF 2**

BEFORE FULLY TIGHTENING ALL SCREWS
CHECK THAT THE SEATS ARE SQUARE

DENHOLME PICNIC TABLE: Assembly Guide - 2 of 2.

Registered Office: Unit 8C, Top Land Country Business Park,
Cragg Road, Mytholmroyd, West Yorkshire, HX7 5RW

Freephone: 0808 281 2929 - E-mail: info@britishrecycledplastic.co.uk

