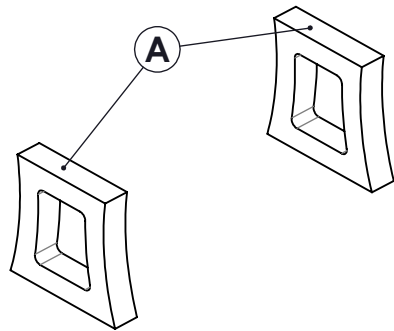


**PARTS LIST - 2 PERSON ASSEMBLY:-**


A	BACKLESS LEG FRAMES	2 no.
B	4 SLAT SEAT SEMI-ASSEMBLED	1 no.
C	70mm S/STEEL SCREWS	4 no.
D	90mm S/STEEL SCREWS	12 no.

**TOOLS:-**

POWER DRILL WITH PHILIPS-HEAD BIT  
MEASURING TAPE & STRAIGHT EDGE


*UNDERSIDE OF SEAT*

POSITION THE 2 MOULDED BACKLESS LEG FRAMES  
ON A FLAT LEVEL SURFACE

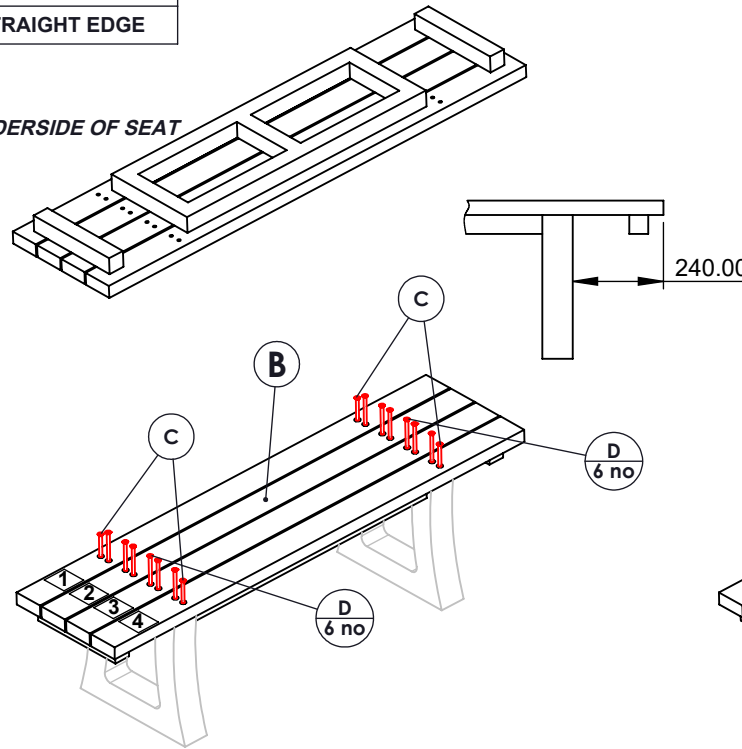

*ALL SEAT SLAT LABELS SHOULD FACE UPWARD AND  
BE ON THE LEFT-HAND SIDE WHEN ASSEMBLED*

POSITION THE FINISHED SEAT SECTION ONTO THE LEG  
FRAMES, LEG FRAMES SHOULD BUTT AGAINST SUB  
FRAME, APPLY A 10mm OVERHANG AT FRONT OF SEAT.  
ENSURE THE PRE-DRILLED SLAT HOLES LINE UP WITH  
THE CENTRE OF THE LEG. FIX WITH 2 x 70mm S/STEEL  
SCREWS ON OUTSIDE FIXING HOLES ON BOTH SIDES OF  
SEAT SLATS. THE REMAINDER OF THE HOLES ARE TO  
BE FIXED WITH 12 x 90mm S/STEEL SCREWS

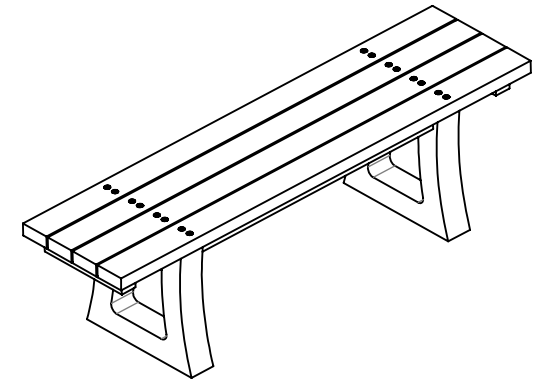

THIS COMPLETES THE BENCH ASSEMBLY

**IMPORTANT:-**

Ensure that you are familiar with these assembly  
instructions prior to commencing assembly.

We will not accept any claims resulting from  
products that have been wrongly assembled.

Employ safe lifting procedures when handling  
components.

Please take care to install your furniture on level ground to ensure it looks its best for decades to come.  
Please note that all dimensions are subject to a tolerance of + or - 3%

Please contact us if you need any further  
help or information.

**OAKWORTH BENCH –  
COLOURED SLATS**  
Assembly Guide

Unit 8F, Top Land Country Business Park  
Cragg Road, Mytholmroyd, Hebden Bridge,  
West Yorkshire, HX7 5RW  
Phone: 01422 419 555  
Mail: [info@britishrecycledplastic.co.uk](mailto:info@britishrecycledplastic.co.uk)

BRITISH  
RECYCLED  
PLASTIC 